

THERMAL REMOVAL

WATER THERMAL REMOVAL

The Thermal Removal software is primarily used to facilitate reading of fuel assembly numbers during core mapping. The natural creation of thermals in the water can be disturbing when numbers or assembly details shall be seen, the SW reduces this negative effect on the visibility.

APPLICATIONS

- The thermal removal SW is a part of the Inspection Station


SPECIFICATIONS

BENEFITS


- Facilitates reading of fuel assembly numbers during core mapping

We reserve the right to alter specifications without prior notice

THERMAL REMOVAL IMAGES

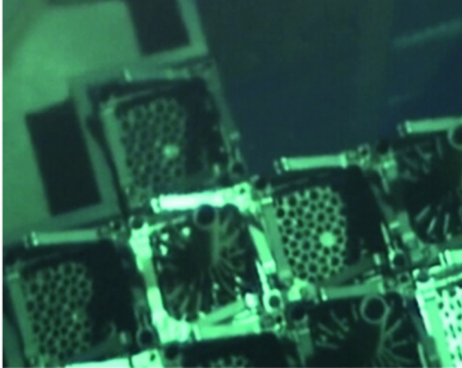

LINKS

 English

ahlbergcameras.staging.westart.se/products/software/thermal-removal

We reserve the right to alter specifications without prior notice